




# WarmMark<sup>®</sup> Models 51013-51035

## Time-Temperature Indicator



Before

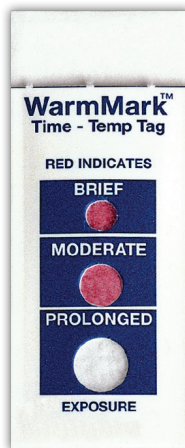

After

1. The WarmMark® Time-Temperature Indicator is not self activating. The activation tab of the indicator must be pulled until the barrier film is completely removed before the tag will operate.
2. Store the WarmMark® Time-Temperature Indicator at least 5°C below its response temperature. Storage at these temperatures ensures the indicator is in a complete solid state at the time of activation. If the indicator is not in a solid state when activated, the tag will begin to run out immediately. If using a WarmMark® indicator with a response temperature below ambient temperature, adhere the indicator to the package or product to be monitored before the activation tab is pulled.
3. Immediately place the indicator in the environment to be monitored. If the indicator is left exposed at or above its response temperature, the chemical will change back to a liquid state and the run out process will begin.
4. To apply the WarmMark® indicator, peel the adhesive liner from the back of the indicator exposing the pressure sensitive adhesive. Adhere the indicator to a clean, dry surface.
5. The activated WarmMark® indicator will begin to run out at its stated response temperature +/- 1°C.
6. DeltaTrak® will not honor warranty claims for products that have not been stored and/or handled in accordance with the above guidelines.



P.O. Box 398 Pleasanton, CA 94566 USA

p (925)249-2250 | (800)962-6776 | f (925)249-2251 | [www.deltatrak.com](http://www.deltatrak.com)

1123\_13J3